






Snowco

1132 West 1st
McPherson, KS 67460
Phone 620-241-3513
Fax 620-241-3532
Toll Free 1-800-677-0898

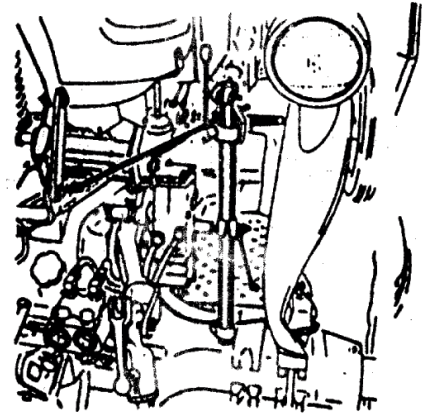

**405200 UNIVERSAL
UMBRELLA BRACKET**

**Fits all Tractors, Combines, Swathers
and Industrial Equipment
MOUNTING INSTRUCTIONS**

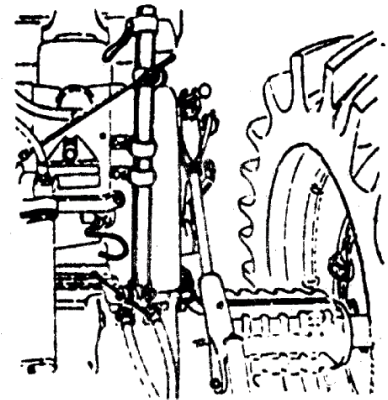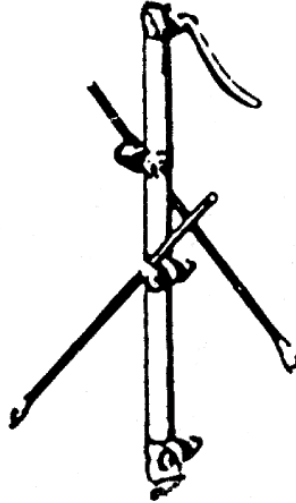

**MOUNTING INSTRUCTIONS
EXAMPLES OF MANNER OF
ATTACHMENT TO FARM TRACTOR**

Select a location on the tractor to the rear and right or left of the seat. Use existing bolts or bolt holes for attachment of angle clip and brace rods. For stability, the brace rods should be at right angles to each other and as high on the tube body as possible.

Alternate installation can be made by bolting the body tube clamps to a fender or other suitable location. Keep body clamps as far apart as possible. Discard brace rods and brace rod clamps when installation is made in this manner.

